



SUMMARY OF KEY FEATURES:

- › CONNECT LAND-MOBILE RADIOS (LMR) TO IRIDIUM PTT NETWORK
- › MOST RADIOS SUPPORTED—CONTACT US WITH YOUR MODEL NUMBERS
- › CONNECT LMR NETWORKS ANYWHERE IN THE WORLD WITH IRIDIUM SATELLITE
- › SYSTEM ACTS AS A PORTABLE AND QUICK-DEPLOY REPEATER
- › CAN BE USED WITH ANY ASE PTT DOCK—FIELD OR BUILDING INSTALLATION
- › KEY—NO “BONK” TONE FROM THE FIELD IF MESSAGE IS UNSUCCESSFUL.

ASE AND IRIDIUM PUSH-TO-TALK (PTT)

ASE XLINK Radio-Satellite-Interoperability

Shown below are the components that ship with, or are needed to integrate with the ASE-XLINK solution.

COMPONENT DETAILS



Land-Mobile Radios

Donor radio connects directly to the Xlink.



ASE XLINK

For linking LMRs to satellite.



ASE PTT Docking Station

Portable or in-building docking stations available.



LMR TO SATELLITE SETUP

PLEASE NOTE:

Interoperability between land-mobile radios and satellite is powerful yet complex. The solution is recommended for highly sophisticated users only.

Contact us for more information at:

sales@blueskynetwork.com

ASE XLINK INTEROPERABILITY

Customized for the Iridium network.

One per radio group.

ASE XLINK-1 C-AT

ASE-XLINK-2 Vocality Basics



ASE XLINK-1



ASE XLINK-2

CONTACT BLUE SKY NETWORK

San Diego, CA Office

5333 Mission Center Road, #220
San Diego, CA 92108, USA

Phone: +1 858-551-3894

E-mail: sales@blueskynetwork.com

Scottsdale, AZ Office

16559 N 92nd Street, #101
Scottsdale, AZ 85260, USA

Phone: +1 480-443-1424

E-mail: info@ase-corp.com



www.blueskynetwork.com

San Diego, CA: +1 858-551-3894

Scottsdale, AZ: +1 480-443-1424

sales@blueskynetwork.com