



Blue Sky Network



HawkEye 5500

Quick Start Guide

Please read before deployment

HAWKEYE 5500 QUICK START GUIDE

Step 1: Install the Battery

Remove the 2 screws from the from the battery cover door and insert the battery into the unit. The unit will power on to indicate proper installation. Power the unit off and replace the screws to complete battery installation.

Step 2: Install into Vehicle

Scan the QR code below or use the following link to download the installation guide for assistance with unit installation: blueskynetwork.com/support/he5500



At a minimum, the following is necessary to power the unit up.

Red	Positive 12/24V (fused)
Black	Negative/Ground
Blue	Switched Power (on when vehicle is running)

Step 3: Power on and Verify

Move the vehicle to an area with a complete view of the sky (see diagram below). Turn on the vehicle to power on the unit and ensure that the status light is green (this may take a minute).



Step 4: Log in and Test

Log into SkyRouter and verify that the unit appears in its correct location. Then, update the unit with your preferred configuration.

WARNING: The default reporting rate for this unit is 10 minutes when moving and 1 hour when stationary, with most of the unit's features disabled. Before use, please update your configuration settings in SkyRouter to unlock the full feature set as necessary.

HAWKEYE 5500 QUICK START GUIDE

CONTROL PANEL:



1. Power Button & Charging LED

- a. Green = Power On
- b. Yellow = Battery < 50%
- c. Red = Low Battery
- d. Red Blink = Dead Battery
- e. Blinking = Charging

2. Signal Status LED

- a. Green = Cellular Mode
- b. Purple = Iridium Mode
- c. Red = Bad Signal

3. Message Waiting LED

- a. Green = Unread Message


4. Waypoint Button & LED

- a. Green = Sending Position

5. Emergency Button & LED

- a. Red Blink = Emergency Requested
- b. Red Solid = Emergency Active

REAR PANEL:

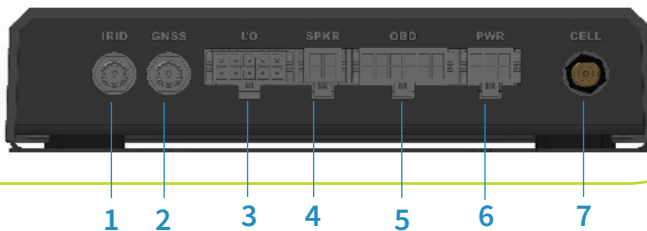

1. Iridium Antenna

2. GNSS Antenna (Active)

3. Emergency Switch & IO

4. Audio Out

5. OBD (Vehicle Interface)

6. Power & Ignition

7. Cellular Antenna (optional External Antenna)



Blue Sky Network

BLUESKYNETWORK.COM