

# ASE-MC08 Firmware Update Procedure

## LOAD FILES:

- a) Copy and extract the Syn Firmware Updater (zip file) to your local directory.
- b) Copy the firmware file(**3.51.3.aase**) to your local directory.

## TOOL SETUP:

- a) Go to your selected directory and run the Syn Firmware Updater.exe
- b) Click on Device\Setup and select the IP address (**192.168.1.100**), Hit OK.
- c) Click on Product and select **Comcenter (ARM)**
- d) Select **Firmware** option under Product. (Do not select data table or bootloader)
- e) Click on Path and select (**3.51.3.aase**) from your local directory.

## PROGRAMMING:

- a) Connect your ethernet cable from your laptop to the MC08 indoor comcenter.
- b) Power up the MC08 indoor comcenter and click UPDATE on the tool.
- c) Once connected, the progress bar should start filling up until it is complete.
- d) This completes the firmware upgrade.